

VELO ASSEMBLY GUIDE

1



Squeeze the silicon in the manner of two lines to the back side of the profile.

2



Paste the profile that you squeezed the silicon to the wall and press.

3



Tape the profile that you pasted to the Wall at 50 cm intervals.

4



Remove the bands that on the profile heedfully the day after.

5



Make sure that the profile is stuck to the wall firmly.

6



Cut both of the two profiles 45 degrees to ensure the rotating of external corners.

7




Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

8



Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

9

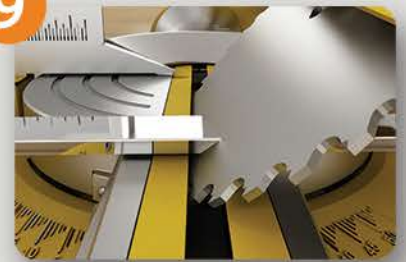

Cut both of the two profiles 45 degrees to ensure the rotating of internal corners.

10



Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

11



Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.