




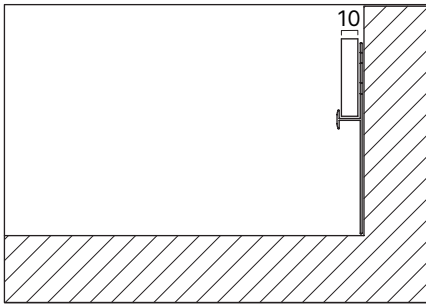


- 1** Pick the correct profile according to the tile thickness.

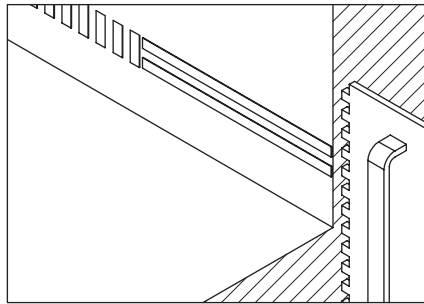


- 2** Apply joint and place the profiles anchor accordingly.

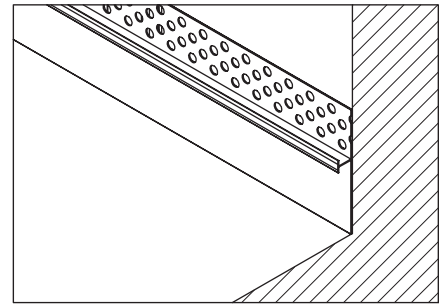


- 3** Press the profile until it is fixed to the joint.

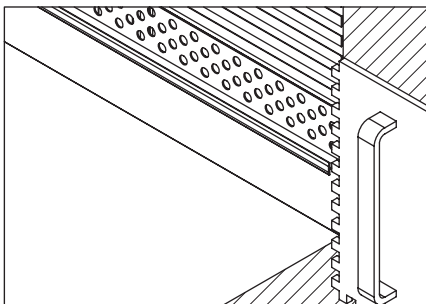


- 4** Apply joint to the places where the ceramics will be placed.

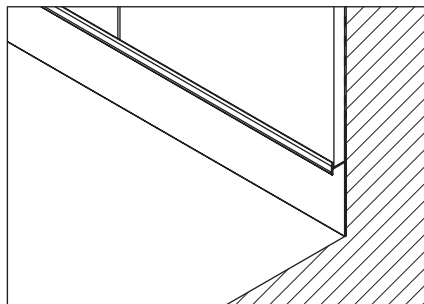


- 5** Place the tiles on the profile, making sure that their edges fit the profile and are flush.

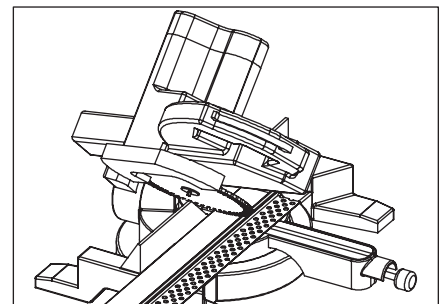


- 6** Cut profiles 45 degrees for external corners.

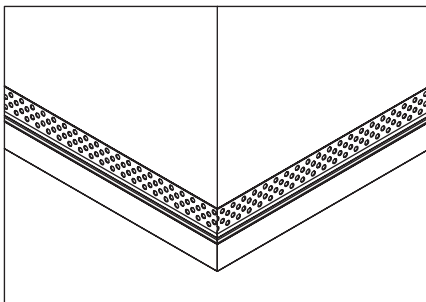


- 7** Align the profiles at the external corners and press them into the joint.

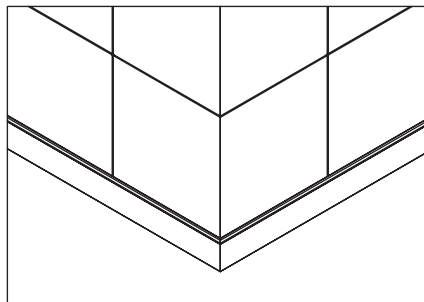


- 8** Place the tiles on the profile, making sure that their edges fit the profile and are flush.

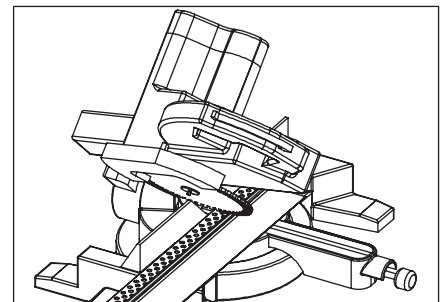

- 9** Cut profiles 45 degrees for external corners.

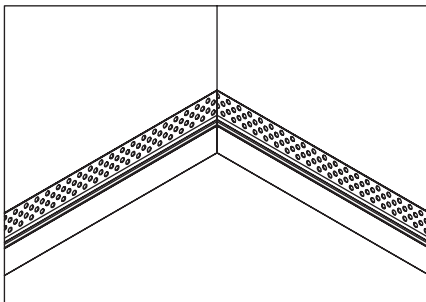

- 10** Align the profiles at the internal corners and press them into the joint.

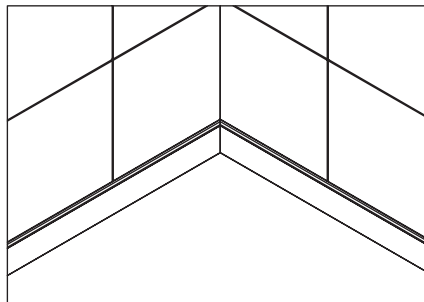

- 11** Place the tiles on the profile, making sure that their edges fit the profile and are flush.